


## BREAKDOWN HT-60

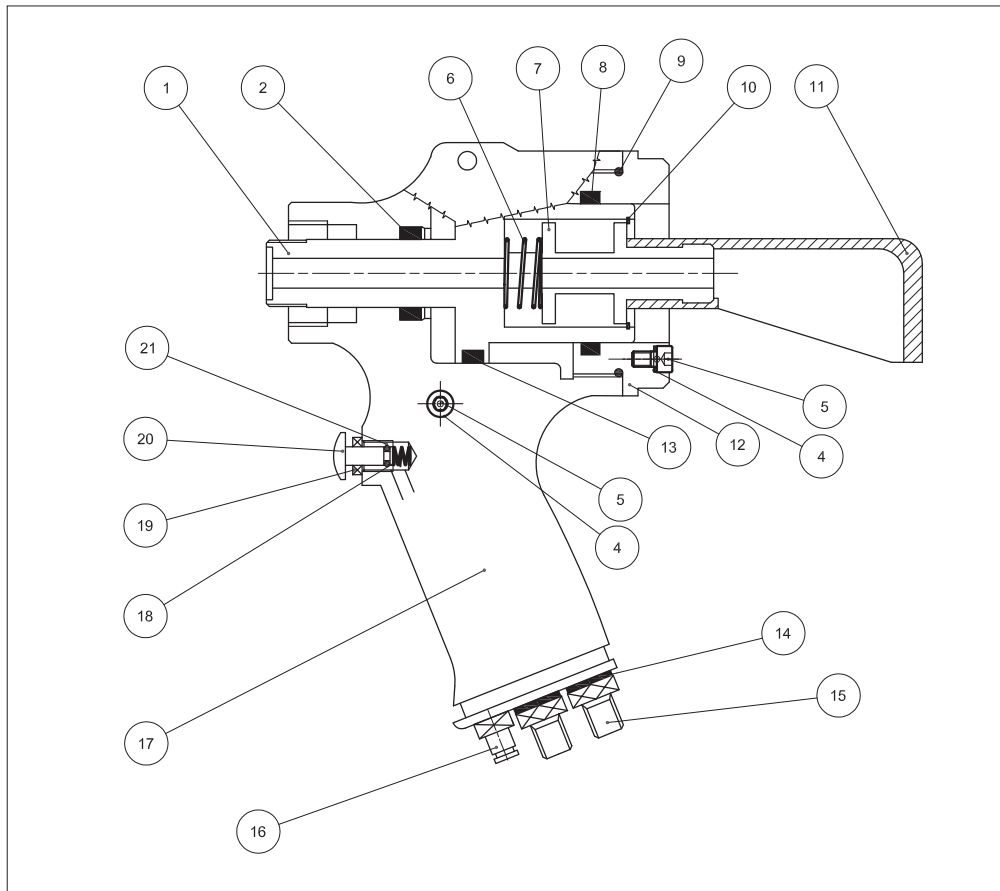

REFERENCE	DESCRIPTION
05BM3002028	KIT RIVETING Ø8.0 ESTRUBOLT
05HT00E1000	KIT RIVETING ESTRUBOLT 10
05HT00B0800	KIT RIVETING BRALOCK Ø8.0
05HT00B1000	KIT RIVETING BRALOCK Ø10
05BM3002025	KIT RIVETING Ø8.0 UNILOCK
05BM3002026	KIT RIVETING Ø10.0 UNILOCK

N°	REFERENCE	DESCRIPTION
1	05HT6000001	PISTON
2	05HT6000002	PACKING
4	05HT6000004	OIL WASHER
5	05HT6000005	BLEED PLUG
6	05HT6000006	DOCK
7	05HT6000007	ROD GUIDE
8	05HT6000008	PACKING
9	05HT6000009	O-RING
10	05HT6000010	GROUP
11	05HT6000011	ROD PROTECTION
12	05HT6000012	BACKGROUND
13	05HT6000013	PACKING
14	05HT6000014	COPPER WASHER
15	05HT6000015	UNION 1/4
16	05HT6000016	AIR FITTING
17	05HT6000017	MAIN BODY
18	05HT6000018	DOCK
19	05HT6000019	NUT
20	05HT6000020	BUTTON
21	05HT6000021	O-RING